



CAUTION



Pneumatic Riveting / Dimpling Machine

- Keep work area clean.
- Before you begin, set correct temperature and timer settings.
- Keep hands clear of anvils during operation.
- Cool hot dimpling dies before removal or adjustment.
- Lower anvil all the way down when changing setup.
- Raise anvil gradually to avoid damage to dies and parts.

Note: Immediately report all machinery malfunctions to the supervisor.